

Clymit™ 300 Quick Setup Guide

I. Clymit 300's Default Network Settings

Clymit 300 has default IP address used for initial access and set-up. The default network settings are:

IP address: 192.168.123.123
Subnet mask: 255.255.255.0
Default gateway: 192.168.123.1

II. First Time Access

Use a PC or a laptop to access Clymit 300 and configure its network settings.

The PC or laptop's Network Interface Card (NIC) must be re-configured to recognize the 192.168.xxx.xxx class address.

You will need to go to "Control Panel" or "Network Settings" and temporarily set your Network Card to the addresses shown below.

Be sure to disable the DHCP setting button. Clymit 300 is capable of DHCP operation but that setting can be used only once the unit is installed.

Note that some computers will require a reboot to change the IP address.

Follow the following step-by-step instruction to access your Clymit 300 for the first time:

- A. Connect Clymit 300's Ethernet port to your computer's NIC using a **cross-over** cable.
- B. On your computer, go to "Start > Settings > Network Connections"
- C. Double-click on the appropriate network adapter's entry in the Network Connections list to open its status dialog box, then click the "Properties" button to open the Properties dialog box.
- D. Highlight "Internet Protocol (TCP/IP)" and select "Properties."
- E. Select the option to "Use the following IP address" and enter:
IP address: 192.168.123.100
Subnet mask: 255.255.255.0
Default gateway: 192.168.123.1
- F. Click "OK" twice.
- G. You can now access Clymit 300 using your web browser, by typing its IP address: 192.168.123.123

Direct Access

