







Assemble•it™ Instructions

Comit Relay Rack


Tools needed:

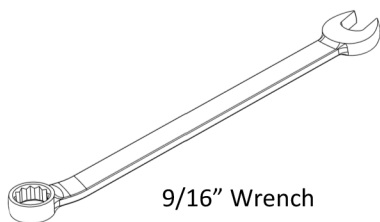


What's in the box:

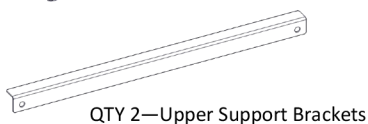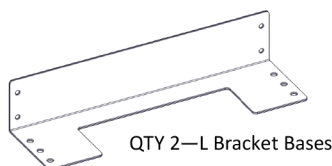


Step 1 : Assemble the L Bracket Bases to the Vertical Rails as shown below. Do this for both sides.

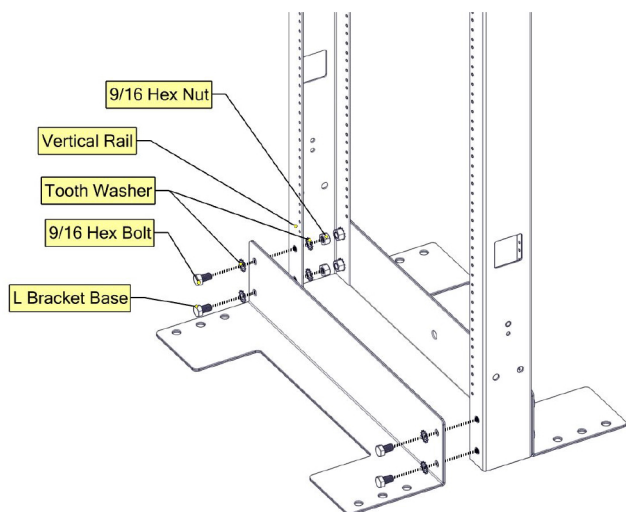


Step 2 : Assemble the Upper Support Brackets to the top of the Vertical Rails as shown below. Do this for both sides.

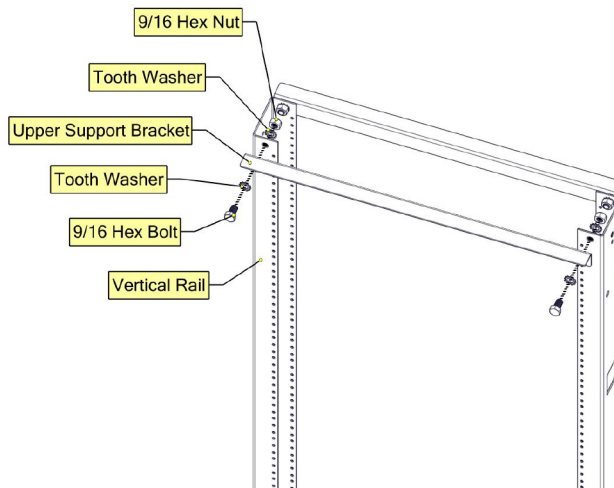

Grounding Studs: Note that there are 1/4-20 Grounding Studs on the top and bottom of each Vertical Rail. See placement below.

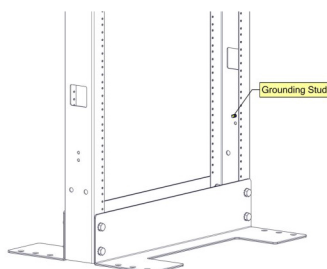

Bottom Location

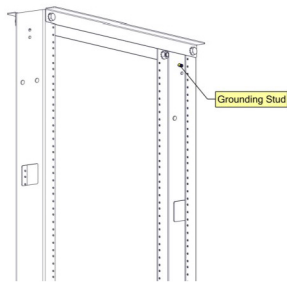

Top Location